

TOSHIBA

Industrial Inverter
(For 3-phase induction motors)

English**Deutsch****Italiano****Español**

TOSVERT VF-S15 with Safety function

Quick Start Manual
Schnellstartanleitung
Guida rapida all'avvio
Manual de inicio rápido

3-phase 240V class	0.4 to 15kW
1-phase 240V class	0.2 to 2.2kW
3-phase 500V class	0.4 to 15kW

NOTICE

1. Make sure that this instruction manual is delivered to the end user of the inverter unit.
2. Read this manual before installing or operating the inverter unit, and store it in a safe place for reference.

Quick Start Manual



TOSVERT VF-S15 with Safety function

I. Safety precautions

The items described in these instructions and on the inverter itself are very important so that you can use safely the inverter, prevent injury to yourself and other people around you as well as to prevent damage to property in the area. Thoroughly familiarize yourself with the symbols and indications shown below and then continue to read the manual. Make sure that you observe all warnings given.

* Read the safety precautions of the instruction manual (CD-ROM) for information not mentioned here.




Explanation of markings

Marking	Meaning of marking
 Warning	Indicates that errors in operation may lead to death or serious injury.
 Caution	Indicates that errors in operation may lead to injury (*1) to people or that these errors may cause damage to physical property. (*2)

(*1) Such things as injury, burns or shock that will not require hospitalization or long periods of outpatient treatment.

(*2) Physical property damage refers to wide-ranging damage to assets and materials.

Meanings of symbols

Marking	Meaning of marking
	Indicates prohibition (Don't do it). What is prohibited will be described in or near the symbol in either text or picture form.
	Indicates an instruction that must be followed. Detailed instructions are described in illustrations and text in or near the symbol.
	-Indicates warning. What is warned will be described in or near the symbol in either text or picture form. -Indicates caution. What the caution should be applied to will be described in or near the symbol in either text or picture form.













■ Limits in purpose










This inverter is used for controlling speeds of three-phase induction motors in general industrial use. Single-phase input model is output by the inverter as three-phase output and cannot drive a single-phase motor.












Safety precautions

- ▼ This product is intended for general purpose uses in industrial application. It cannot be used applications where may cause big impact on public uses, such as power plant and railway, and equipment which endanger human life or injury, such as nuclear power control, aviation, space flight control, traffic, safety device, amusement, or medical. It may be considerable whether to apply, under the special condition or an application where strict quality control may not be required. Please contact your Toshiba distributor.
- ▼ Please use our product in applications where do not cause serious accidents or damages even if product is failure, or please use in environment where safety equipment is applicable or a backup circuit device is provided outside the system.
- ▼ Please do not use our product for any load other than three-phase induction motors in general industrial use. (Use in other than properly applied three-phase induction motors may cause an accident.) Single-phase input model is output by the inverter as three-phase output and cannot drive a single-phase motor.

■ Handling  Warning	
 Disassembly prohibited	<ul style="list-style-type: none"> • Never disassemble, modify or repair. This can result in electric shock, fire and injury. Call your Toshiba distributor for repairs.
 Prohibited	<ul style="list-style-type: none"> • Never remove the terminal block cover when power is on. The unit contains many high voltage parts and contact with them will result in electric shock. • Do not stick your fingers into openings such as cable wiring holes and cooling fan covers. This can result in electric shock or other injury. • Do not place or insert any kind of object (electrical wire cuttings, rods, wires etc.) into the inverter. This can result in electric shock or fire. • Do not allow water or any other fluid to come in contact with the inverter. This can result in electric shock or fire.
 Mandatory action	<ul style="list-style-type: none"> • Turn the power on only after attaching the terminal block cover. If the power is turned on without the terminal block cover attached, this can result in electric shock or other injury. • If the inverter begins to emit smoke or an unusual odor, or unusual sounds, immediately turn the power off. Continuous use of the inverter in such a state may cause fire. Call your Toshiba distributor for repairs. • Always turn the power off if the inverter is not used for long periods of time since there is a possibility of malfunction caused by leaks, dust and other material. If power is left on with the inverter in that state, it may result in fire.
■ Handling  Caution	
 Contact prohibited	<ul style="list-style-type: none"> • Do not touch heat radiating fins or discharge resistors. These devices are hot, and you'll get burned if you touch them.
 Mandatory action	<ul style="list-style-type: none"> • Use an inverter that conforms to the specifications of power supply and three-phase induction motor being used. If the inverter being used does not conform to those specifications, not only will the three-phase induction motor not rotate correctly, but it may also cause serious accidents through overheating and fire.
■ Transportation & installation  Warning	
 Prohibited	<ul style="list-style-type: none"> • Do not install or operate the inverter if it is damaged or any component is missing. This can result in electric shock or fire. Call your Toshiba distributor for repairs. • Do not place any inflammable objects near the inverter. • If an accident occurs in which flame is emitted, this could lead to fire. • Do not install in any location where the inverter could come into contact with water or other fluids. This can result in electric shock or fire.
 Mandatory action	<ul style="list-style-type: none"> • Operate under the environmental conditions prescribed in the instruction manual. Operations under any other conditions may result in malfunction. • Mount the inverter on a metal plate. The rear panel gets very hot. Do not install in an inflammable object, this can result in fire. • Do not operate with the terminal block cover removed. This can result in electric shock. Failure to do so can lead to risk of electric shock and can result in death or serious injury. • An emergency stop device must be installed that fits with system specifications (e.g. shut off input power then engage mechanical brake). Operation cannot be stopped immediately by the inverter alone, thus resulting in an accident or injury. • All options used must be those specified by Toshiba. • The use of any other option may result in an accident. • When using switchgear for the inverter, it must be installed in a cabinet. • Failure to do so can lead to risk of electric shock.
■ Transportation & installation  Caution	
 Prohibited	<ul style="list-style-type: none"> • When transporting or carrying, do not hold by the front panel covers. The covers may come off and the unit will drop, resulting in injury. • Do not install in any area where the unit would be subject to large amounts of vibration. This could cause the unit to fall, resulting in bodily injury.

 Mandatory action	<ul style="list-style-type: none"> When removing and installing the terminal cover with a screwdriver, be sure not to scratch your hand as these results in injury. Pressing too hard on the screwdriver may scratch the inverter. Always turn the power off when removing the wiring cover. After wiring is complete, be sure to replace the terminal cover. The main unit must be installed on a base that can bear the unit's weight. If the unit is installed on a base that cannot withstand that weight, the unit may fall, resulting in injury. If braking is necessary (to hold motor shaft), install a mechanical brake. The brake on the inverter will not function as a mechanical hold, and if used for that purpose, injury may result.
■ Wiring  Warning	
 Prohibited	<ul style="list-style-type: none"> Do not connect input power to the output (motor side) terminals (U/T1, V/T2, W/T3). Connecting input power to the output could destroy the inverter or cause a fire. Do not insert a braking resistor between DC terminals (between PA/+ and PC/- or PO and PC/-). It could cause a fire. First shut off input power and wait at least 15 minutes before touching terminals and wires on equipment (MCCB) that is connected to inverter power side. Touching the terminals and wires before that time could result in electric shock. Do not shut down the external power supply on ahead when VIA or VIB terminals are used as logic input terminal by external power supply. It could cause unexpected result as VIA or VIB terminals are ON status.
 Mandatory action	<ul style="list-style-type: none"> Electrical construction work must be done by a qualified expert. Connection of input power by someone who does not have that expert knowledge may result in fire or electric shock. Connect output terminals (motor side) correctly. If the phase sequence is incorrect, the motor will operate in reverse and that may result in injury. Wiring must be done after installation. If wiring is done prior to installation, that may result in injury or electric shock. The following steps must be performed before wiring: (1) Turn off all input power.; (2) Wait at least 15 minutes and check to make sure that the charge lamp is no longer lit.; and (3) Use a tester that can measure DC voltage (400VDC or 800VDC or more), and check to make sure that the voltage to the DC main circuits (across PA/+ - PC/-) is 45V or less. If these steps are not properly performed, the wiring will cause electric shock. Tighten the screws on the terminal block to specified torque. If the screws are not tightened to the specified torque, it may lead to fire. Check to make sure that the input power voltage is +10%, -15% of the rated power voltage ($\pm 10\%$ when the load is 100% in continuous operation) written on the name plate. If the input power voltage is not +10%, -15% of the rated power voltage ($\pm 10\%$ when the load is 100% in continuous operation), this may result in fire. Set a parameter F_{i29} when VIA or VIB terminals are used as logic input terminal. If it is not set, it could result in malfunction.
 Be Grounded	<ul style="list-style-type: none"> Ground must be connected securely. If the ground is not securely connected, it could lead to electric shock or fire.
■ Wiring  Caution	
 Prohibited	<ul style="list-style-type: none"> Do not attach devices with built-in capacitors (such as noise filters or surge absorbers) to the output (motor side) terminals. This could cause a fire.
■ Operations  Warning	
 Prohibited	<ul style="list-style-type: none"> Never touch the internal connector while the upper terminal cover of control panel is opened. There is a risk of electrical shock because it carries a high voltage. Do not touch inverter terminals when electrical power is going to the inverter even if the motor is stopped. Touching the inverter terminals while power is connected to it may result in electric shock. Do not touch switches when the hands are wet and do not try to clean the inverter with a damp cloth. Such practices may result in electric shock.

 Mandatory action	<ul style="list-style-type: none"> • Turn the input power on only after attaching the terminal block cover. When enclosed inside a cabinet and used with the terminal block cover removed, always close the cabinet doors first and then turn the power on. If the power is turned on with the terminal block cover or cabinet doors open may result in electric shock. • Make sure that operation signals are off before resetting the inverter after malfunction. If the inverter is reset before turning off the operating signal, the motor may restart suddenly, resulting in injury. • If incorrect setting, the drive may have some damage or unexpected movement. Be sure to set the setup menu correctly.
■ Operations  Caution	
 Prohibited	<ul style="list-style-type: none"> • Observe all permissible operating ranges of motors and mechanical equipment. (Refer to the motor's instruction manual.) Not observing these ranges may result in injury.
 Mandatory action	<ul style="list-style-type: none"> • Use an inverter that conforms to the specifications of power supply and three-phase induction motor being operated. If the inverter being used does not conform to those specifications, not only will the three-phase induction motor not rotate correctly, but it may cause serious accidents through overheating and fire. • The leakage current through the input/output power cables of inverter and capacitance of motor may affect to peripheral devices. The value of leakage current is increased under the condition of the PWM carrier frequency and the length of the input/output power cables. In case the total cable length (total of length between an inverter and motors) is more than 100m, overcurrent trip may occur even the motor no-load current. Make enough space among each phase cable or install the filter (MSF) as countermeasure.
■ Maintenance and inspection  Warning	
 Prohibited	<ul style="list-style-type: none"> • Do not replace parts. This could be a cause of electric shock, fire and bodily injury. To replace parts, call your Toshiba distributor.
 Mandatory action	<ul style="list-style-type: none"> • The equipment must be inspected daily. If the equipment is not inspected and maintained, errors and malfunctions may not be discovered and that could result in accidents. • Before inspection, perform the following steps. ; (1) Turn off all input power to the inverter. ; (2) Wait at least 15 minutes and check to make sure that the charge lamp is no longer lit. ; and (3) Use a tester that can measure DC voltages (400V/800V DC or more), and check that the voltage to the DC main circuits (across PA/+ - PC/-) is 45V or less. Performing an inspection without carrying out these steps first could lead to electric shock.
■ Disposal  Caution	
 Mandatory action	<ul style="list-style-type: none"> • If you dispose of the inverter, have it done by a specialist in industry waste disposal (*). If you dispose of the inverter by yourself, this can result in explosion of capacitor or produce noxious gases, resulting in injury. (*) Persons who specialize in the processing of waste and known as "industrial waste product collectors and transporters" or "industrial waste disposal persons". Please observe any applicable law, regulation, rule or ordinance for industrial waste disposal.

II. Safety function


There are the following manuals at the back of the Japanese manual (Japanese model) in CD-ROM. Refer to the manuals for safety function.

Safety function (STO) : E6581860 VF-S15 Safety function manual
ATEX : E6581861 VF-S15 ATEX Guide


Please operate the inverter in the following procedure 1 to 6.

1. Check the purchase

Check that the inverter type is the same as your order.

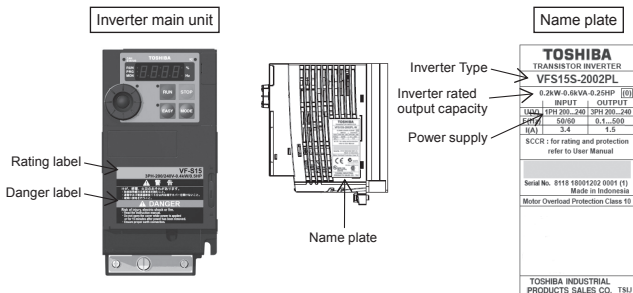


2. Install the inverter

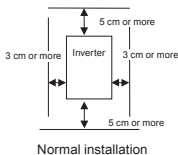

* For side-by-side installation, refer to the instruction manual.

3. Remove the terminal block cover


ex. VFS15S-2002PL

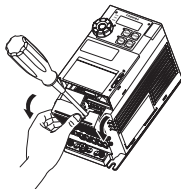

- (1) Insert a screwdriver or other thin object into the hole indicated with the mark.
- (2) While pressing on the screwdriver, rotate the terminal cover downward to remove it.
- (3) Next, remove the inside terminal block cover.

4. Connect to the power supply and the motor (wiring)

(1) Connect to the terminal R, S and T (single phase: R and S) of the power supply.

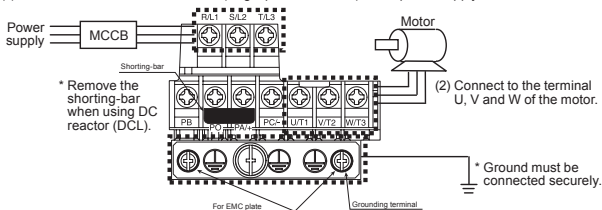

Power circuit terminal block


Screw size	Tightening torque	
M3.5 screw	1.0 N·m	8.9 lb·in
M4 screw	1.4 N·m	12.4 lb·in
M5 screw	2.4 N·m	20.8 lb·in
M6 screw	4.5 N·m	40.0 lb·in
M4 screw (grounding terminal)	1.4 N·m	12.4 lb·in
M5 screw (grounding terminal)	2.8 N·m	24.8 lb·in



Voltage class	Applicable motor (kW)	Wire size (mm ²)			
		Power circuit Note 1)			Grounding cable
		Input		Output	
without DCL	With DCL				
3-phase 240V	0.2-1.5	1.5	1.5	1.5	2.5
	2.2	2.5	1.5	1.5	2.5
	4.0	4.0	2.5	2.5	4.0
	5.5	10	4.0	6.0	10
	7.5	16	6.0	10	16
	11	25	10	16	16
	15	35	16	25	16
1-phase 240V	0.2-0.75	1.5	1.5	1.5	2.5
	1.5	2.5	2.5	1.5	2.5
	2.2	4.0	4.0	1.5	4.0
3-phase 500V	0.4-2.2	1.5	1.5	1.5	2.5
	4.0	2.5	1.5	1.5	2.5
	5.5	4.0	1.5	2.5	4.0
	7.5	6.0	2.5	2.5	6.0
	11	10	4.0	6.0	10
	15	16	6.0	10	16


Note 1) The power circuit wire length is assumed to be 30m or less.

5. Turn on the power supply

Set the setup menu after power on.

 Caution	If incorrect setting, the drive may have some damage or unexpected movement. Be sure to set the setup menu correctly.
--	---

Setting dial	LED display	Operation				
	"5 E L"	Power on				
	<table border="1"> <tr> <td>EU</td> <td>JP</td> </tr> <tr> <td>AS I A</td> <td>U S A</td> </tr> </table>	EU	JP	AS I A	U S A	Turn the setting dial and select region.
EU	JP					
AS I A	U S A					
	in it	Press the setting dial				
	0.0	Finish setup				

Parameter setting	EU	AS I A	U S A	JP
Main region	Europe	Asia, Oceania	North America	Japan
 Motor	230/400(V)	230/400(V)	230/460(V)	200/400(V)
	50(Hz)	50(Hz)	60(Hz)	60(Hz)

Note) When you operate the inverter with external signals, please select Sink logic, Source logic, or PLC(external power supply) by SW1.

6. Operate the inverter


Panel operation is possible with default settings.




7. Operate the inverter with external signals

Wire the control circuit, set the parameter and select SW1.

7.1 Wiring

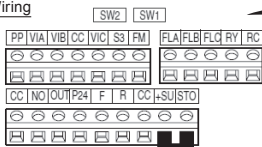

Initial position




⊕ Screw for removable control terminal block

RS485 connector

Operation command

<Sink logic>



Forward run when F-CC or P24-F is ON.

Screw size	Recommended tightening torque
M3 screw	0.5 N·m 4.4 lb·in

Stripping length: 6 (mm)

Screwdriver:


Small-sized flat-blade type

(Blade thickness: 0.5 mm, blade width: 3.5 mm)


Conductor	1 wire	2 wires of same size
Solid	0.3-1.5mm ²	0.3-0.75mm ²
Stranded	(AWG 22-16)	(AWG 22-18)

Frequency setting


1) Potentiometer

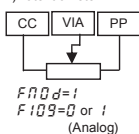

2) Current input (4 to 20mA)



3) Voltage input (0 to 10V) or (-10 to +10V)

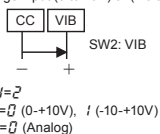

7.2 Parameter setting

Determine the operation method with $C_{\text{NO}}d$ and frequency setting with $F_{\text{NO}}d$.

Title	Function	Adjustment range	Default setting
$C_{\text{NO}}d$	Command mode selection	0: Terminal block, 1: Panel 2: RS485, 3: CANopen, 4: Option	1
$F_{\text{NO}}d$	Frequency setting mode selection 1	0: Setting dial 1, 1: Terminal VIA 2: Terminal VIB, 3: Setting dial 2 4: RS485, 5: UP/DOWN from logic input 6: CANopen, 7: Communication option 8: Terminal VIC 11: Pulse train input, 14: S_r	0

Select the signal of terminal VIA and VIB


$F_{\text{IO}}7$	Analog input terminal selection (VIB)	0: 0-+10V, 1: -10-+10V	0
$F_{\text{IO}}9$	Analog/logic input selection (VIA/VIB)	0 to 4 *See the instruction manual for detail.	0

8. Main parameters

Contents	Title	Function	Adjustment range	Default setting
Set acceleration/ deceleration time to suit the machinery. The RCC/dEL value is time that output frequency reach from 0Hz to FH value.	RCC	Acceleration time 1	0.0-3600 (360.0) (s)	10.0
	dEL	Deceleration time 1	0.0-3600 (360.0) (s)	10.0
	FH	Maximum frequency	30.0-500.0 (Hz)	80.0
Set the upper and lower limit of the output frequency	UL	Upper limit frequency	0.5- FH (Hz)	*1
	LL	Lower limit frequency	0.0- UL (Hz)	0.0
Select the V/f control mode to suit the machine	Pt	V/F control mode selection	0: V/F constant 1: Variable torque 2: Automatic torque boost control 3: Vector control 4: Energy-saving 5: Dynamic energy-saving 6: PM motor control 7: V/F 5-point setting	*1
Adjust the electronic thermal for the motor protection.	tHr	Motor electronic-thermal protection level 1	10-100 (%(A))	100

*1: Default setting values vary depending on the setup menu setting.

9. Panel operation

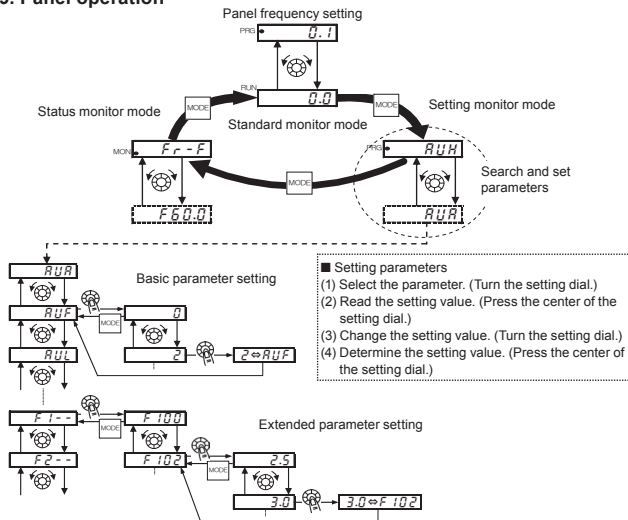




10. Refer to the instruction manual for applied operation or malfunction.

8. Parámetros principales

Contenido	Título	Función	Escala de ajuste	Configuración por defecto
Defina el tiempo de aceleración/desaceleración para adecuarlo a la maquinaria. El valor ACC / dEC es el tiempo que tarda la frecuencia de salida desde 0Hz al valor FH .	ACC	Tiempo de aceleración 1	0.0-3600 (360.0) (s)	10,0
	dEC	Tiempo de desaceleración 1	0.0-3600 (360.0) (s)	10,0
	FH	Frecuencia máxima	30.0-500.0 (Hz)	80,0
Defina el límite superior e inferior de la frecuencia de salida	UL	Frecuencia límite superior	0,5- FH (Hz)	*1
	LL	Frecuencia límite inferior	0,0- UL (Hz)	0,0
Seleccione el modo de control V/f según la maquinaria	Pt	Selección del modo de control V/F	0: Constante V/F 1: Par variable 2: Control de aumento automático de par 3: Control vectorial 4: Ahorro de energía 5: Ahorro de energía dinámico 6: Control del motor PM 7: Configuración de V/F de 5 puntos	*1
Ajuste el nivel de protección termo-electrónica del motor.	tHr	Nivel de protección termo-electrónica del motor 1	10-100 (%(A))	100

*1: Los valores de configuración por defecto varían en función de la configuración del menú de ajuste.

9. Operación del panel

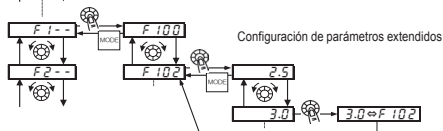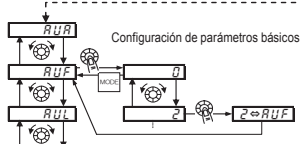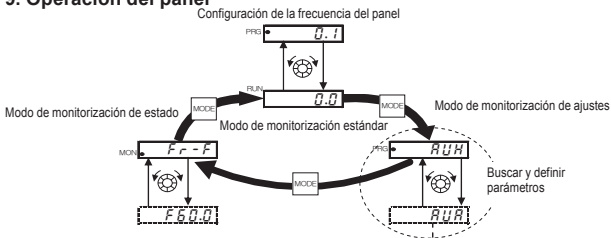

■ Parámetros de configuración

- (1) Seleccione el parámetro. (Gire el dial de ajuste.)
- (2) Lea el valor de configuración. (Pulse el centro del dial de ajuste.)
- (3) Cambie el valor del parámetro. (Gire el dial de ajuste.)
- (4) Determine el valor de configuración. (Pulse el centro del dial de ajuste.)

10. Consulte el manual de instrucciones en relación con la operación aplicada o avería

TOSVERT VF-S15

Additional sheet

TOSVERT VF-S15 listed on the following table integrates the "Safe Torque Off" function.

Read this additional sheet and the instruction manual attached the product before using "Safe Torque Off" function.

Range	Reference		
	Three phase 200 to 240Vac	Single phase 200 to 240Vac	Three phase 380 to 500Vac
0.2 kW	VFS15-2002PM- /Y-A*	VFS15S-2002PL- /W1/Y-A*	----
0.4 kW	VFS15-2004PM- /W1/Y-A*	VFS15S-2004PL- /W1/Y-A*	VFS15-4004PL- /W1/Y-A*
0.75 kW	VFS15-2007PM- /W1/Y-A*	VFS15S-2007PL- /W1/Y-A*	VFS15-4007PL- /W1/Y-A*
1.5 kW	VFS15-2015PM- /W1/Y-A*	VFS15S-2015PL- /W1/Y-A*	VFS15-4015PL- /W1/Y-A*
2.2 kW	VFS15-2022PM- /W1/Y-A*	VFS15S-2022PL- /W1/Y-A*	VFS15-4022PL- /W1/Y-A*
3.7 / 4.0 kW	VFS15-2037PM- /W1/Y-A*	----	VFS15-4037PL- /W1/Y-A*
5.5 kW	VFS15-2055PM- /W1/Y-A*	----	VFS15-4055PL- /W1/Y-A*
7.5 kW	VFS15-2075PM- /W1/Y-A*	----	VFS15-4075PL- /W1/Y-A*
11 kW	VFS15-2110PM- /W1/Y-A*	----	VFS15-4110PL- /W1/Y-A*
15 kW	VFS15-2150PM- /W1/Y-A*	----	VFS15-4150PL- /W1/Y-A*

Related Documents

Title of Documentation	Reference number
VF-S15 Instruction manual	E6581611
VF-S15 Quick Start manual	E6581929
VF-S15 Safety manual (Note)	E6581860
VF-S15 Atext manual (Note)	E6581861


(Note) These are at the back of the Japanese manual (Japanese model) in CD-ROM.

1. Description of control terminals

The model integrated the "Safe Torque Off" function has STO terminal.

In default setting, terminals +SU and STO is short-circuited by shorting bar.

1.1 Terminal layout of control blocks

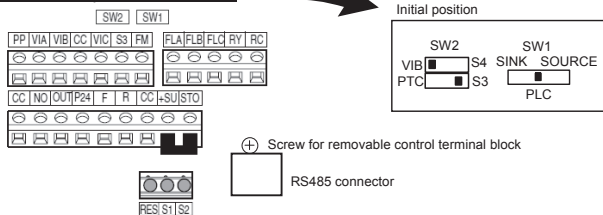

■ Control circuit terminals

Terminal symbol	Input / output	Function	Electrical specifications	Inverter internal circuits
FM	Output	Multifunction programmable analog output. Default setting: output frequency. The function can be changed to meter option (0-1mA), 0-10Vdc voltage or 0-20mAdc (4-20mA) current output by parameter <i>F681</i> setting. Resolution Max. 1/1000.	1mAdc full-scale ammeter or QS60T(option) 0-20mA (4-20mA) DC ammeter Permissible load resistance: 600Ω or less 0-10V DC volt meter Permissible load resistance: 1kΩ or more	
P24	Output	24Vdc power output	24Vdc-100mA	
	Input	This terminal can be used as a common terminal when an external power supply is used by changing SW1 to PLC side.	-	
+SU	Input	DC power input terminal for operating the control circuit. Connect a control power backup device (option or 24Vdc power supply) between +SU and CC.	Voltage: 24Vdc±10% Current: 1A or more	
	Output	It is used with STO for safety function. +SU and STO terminals are short-circuited by metal bar and the inverter is put into a standby state at default setting. When the circuit between them is opened, the motor is coasting stop.	-	
STO Note 1)	Input	When +SU and STO are short-circuited, the inverter is put into a standby state. (Default setting) And when the circuit between them is opened, the motor is coasting stop. These terminals can be used for inter lock. This terminal is not a multifunction programmable input terminal. It is a terminal with the safety function that complies with SIL II of the safety standard IEC61508.	Independently of SW1 ON: DC17V or more OFF: Less than DC12V (OFF: Coast stop)	


Note 1) When STO terminal is used as the safety function, refer to Safety manual and Atex manual.

Note 2) Refer the other control terminals to section 2.3.2 of instruction manual.


2. Standard connection diagram

This diagram shows a standard wiring of the main circuit.

Standard connection diagram – SOURCE (Positive) (common:P24)

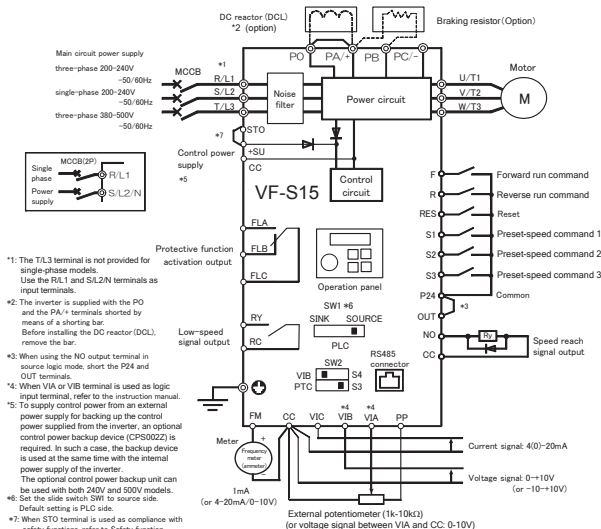

Standard connection diagram - SINK (Negative) (common:CC)

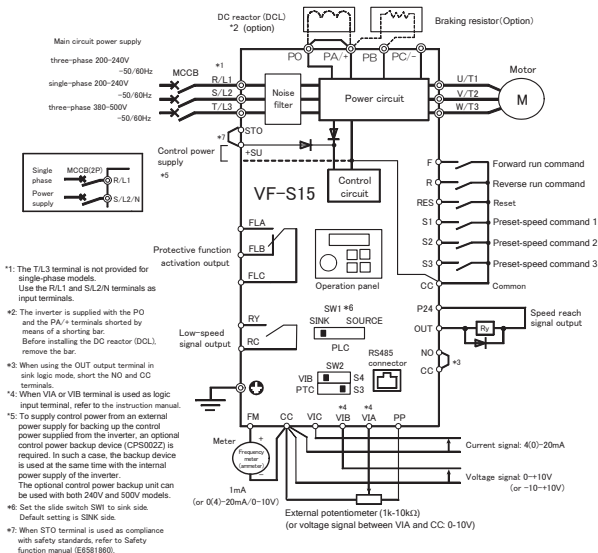

Appendix: Manufacturer's Declaration of Conformity

TOSHIBA

MANUFACTURER'S DECLARATION OF CONFORMITY

TOSHIBA SCHNEIDER INVERTER CORPORATION
Offer Marketing

We : TOSHIBA SCHNEIDER INVERTER CORPORATION
1-19-30, Aoi Higashi-Ku, Nagoya,
Aichi, 461-0004 JAPAN

declare under our own responsibility that the products manufactured after the date below :

TRADEMARK: TOSHIBA

NAME, TYPE: Drive, type TOSVERT VF-S15

MODELS: VFS15, may be followed by S, followed by 2 or 4, followed by 002, 004, 007, 015, 022, 037, 055, 075, 110 or 150, followed by PL, may be followed by W1, may be followed by 1 or 2 characters, may be followed by 1 or 2 digits.
0.2 kW to 2.2 kW, 200 to 240 Vac single phase, or 0.4 kW to 15 kW 380 to 500 Vac three phase power supply, 50 / 60 Hz
Options with combination of 2 to 6 characters and 3 to 7 digits for use with VF-S15 series.

to which this declaration refers, conform to the APPLICABLE EUROPEAN DIRECTIVES:

ATEX Directive No 94/9/EC for ATEX zones 1, 21, 2, 22

EMC Directive No 2004/108/EC

Low Voltage Directive No 2006/95/EC

Machinery Directive No 2006/42/EC

for those application areas where this marking is mandatory and according to the STANDARD OR NORMATIVE DOCUMENTS:

- IEC 61800-3 (2004) - Semiconductor power converters for adjustable frequency drive systems environments 1 and 2.
- IEC 61800-5-1 (2007) - Adjustable speed electrical power drive systems safety requirements – Electrical, thermal and energy.
- IEC 61800-5-2 (2007) - Adjustable speed electrical power drive systems safety requirements – Functional.
- EN 954-1 (1996): Category 3, EN ISO 13849-1 (2008): Category 3 PLD, IEC 61508 (2010) (part 1, 2 and 3) : SIL 2, IEC 62061 (2005): SIL2 CL2, EN 50495 (2010): SIL 2 - see ATEX guide.

Subject to correct installation, maintenance and use conforming to its (their) intended purpose, to the applicable regulations and standards, to the supplier's instructions and to accepted rules of the art, the product(s) complies(y) with the provisions of the above European Directives.

Compliance with the ATEX & EMC Directives will require the application of:

- ATEX guide and instruction manual giving details and advices for installation of products used.
- These ATEX and instruction manual are attached with the product.

Our products are manufactured under ISO 9001:2000 procedure and ISO 14001:2004 for the following sites:
PT Schneider Electric Manufacturing Batam (SEMB) Indonesia

The manufacturing quality assurance system of each manufacturing plant has been notified under the following references by INERIS (European Notified Body identified under the number 0080) :
(notification ref. ; INERIS08ATEXQ705 for SEMB)

The CE marking on the product and/or their packaging signifies that TOSHIBA SCHNEIDER INVERTER CORPORATION holds the reference technical file available to the European Union Authorities.

Technical File detained by

S.T.I.E.
Rue Andre Blanchet, 27120 Pacy sur Eure, France

Name: Fredric Roussel
Title: Certification Manager

Signature: 

Issued and authorized on 20th Apr. 2012 by

TOSHIBA SCHNEIDER INVERTER CORPORATION
1-19-30, Aoi Higashi-Ku, Nagoya, Aichi, 461-0004,
JAPAN

Name: Shin Okada
Title: Offer Marketing, Senior Manager

Signature: 

TOSHIBA

MANUFACTURER'S DECLARATION OF CONFORMITY

Range	Reference	
	Single phase 200 to 240Vac	Three phase 380 to 500Vac
0.2 kW	VFS15S-2002PL- /W1/Y-A*	-----
0.4 kW	VFS15S-2004PL- /W1/Y-A*	VFS15-4004PL- /W1/Y-A*
0.75 kW	VFS15S-2007PL- /W1/Y-A*	VFS15-4007PL- /W1/Y-A*
1.5 kW	VFS15S-2015PL- /W1/Y-A*	VFS15-4015PL- /W1/Y-A*
2.2 kW	VFS15S-2022PL- /W1/Y-A*	VFS15-4022PL- /W1/Y-A*
3.7 / 4.0 kW	-----	VFS15-4037PL- /W1/Y-A*
5.5 kW	-----	VFS15-4055PL- /W1/Y-A*
7.5 kW	-----	VFS15-4075PL- /W1/Y-A*
11 kW	-----	VFS15-4110PL- /W1/Y-A*
15 kW	-----	VFS15-4150PL- /W1/Y-A*

TOSHIBA

DECLARATION OF INCORPORATION

(manufacturer's declaration under Machinery Directive 2006/42/EC, article 7)

TOSHIBA SCHNEIDER INVERTER CORPORATION
Offer Marketing

We : TOSHIBA SCHNEIDER INVERTER CORPORATION
1-19-30, Aoi Higashi-Ku, Nagoya,
Aichi, 461-0004 JAPAN

declare under our own responsibility that the products manufactured after the date below :

TRADEMARK: TOSHIBA

NAME, TYPE: Drive, type **TOSVERT VF-S15**

MODELS: VFS15, followed by 2, followed by 002, 004, 007, 015, 022, 037, 055, 075, 110 or 150, followed by PM, may be followed by W1, may be followed by 1 or 2 characters, may be followed by 1 or 2 digits.
0.2 kW to 15 kW, 200 to 240 Vac three phase power supply, 50 / 60 Hz
Options with combination of 2 to 6 characters and 3 to 7 digits for use with VF-S15 series.

is (are) intended to be incorporated into machinery or assembled with other machinery to constitute machinery covered by the Council Directive 2006/42/EC of 17th May 2006 complies(y) with the provisions of the following Council Directive(s) :

ATEX Directive	No 94/9/EC for ATEX zones 1, 21, 2, 22
Low Voltage Directive	No 2006/95/EC
Machinery Directive	No 2006/42/EC

for those application areas where this marking is mandatory and according to the STANDARD OR NORMATIVE DOCUMENTS:

- IEC 61800-3 (2004) - Semiconductor power converters for adjustable frequency drive systems environments 1 and 2.
- IEC 61800-5-1 (2007) - Adjustable speed electrical power drive systems safety requirements – Electrical, thermal and energy.
- IEC 61800-5-2 (2007) - Adjustable speed electrical power drive systems safety requirements – Functional.
- EN 954-1 (1996) : Category 3, EN ISO 13849-1 (2008) : Category 3 PLd, IEC 61508 (2010) (part 1, 2 and 3) : SIL 2, IEC 62061 (2005) : SIL2 CL2, EN 50495 (2010) : SIL 2 - see ATEX guide.

We recommend customers to follow our publication providing advice on installation procedures.

Furthermore we warn that it (they) must not be put into service until the machinery into which it is (they are) to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC, by EMC directive 2004/108/EC and as transposed into the national Regulations implementing the Machinery Directive.

Our products are manufactured under ISO 9001:2000 procedure and ISO 14001:2004 for the following sites:
PT Schneider Electric Manufacturing Batam (SEMB) Indonesia

The manufacturing quality assurance system of each manufacturing plant has been notified under the following references by INERIS (European Notified Body identified under the number 0080) :
(notification ref. : INERIS08ATEXQ705 for SEMB)

The CE marking on the product and/or their packaging signifies that TOSHIBA SCHNEIDER INVERTER CORPORATION holds the reference technical file available to the European Union Authorities.

Technical File detained by

Issued and authorized on 20th Apr. 2012 by

S.T.I.E.
Rue Andre Blanchet, 27120 Pacy sur Eure, France

TOSHIBA SCHNEIDER INVERTER CORPORATION
1-19-30, Aoi Higashi-Ku, Nagoya, Aichi, 461-0004,
JAPAN


Name: Fredric Roussel
Title: Certification Manager

Name: Shin Okada
Title: Offer Marketing, Senior Manager

Signature:



Signature:



TOSHIBA**DECLARATION OF INCORPORATION***(manufacturer's declaration under Machinery Directive 2006/42/EC, article 7)*

Range	Reference
	Three phase 200 to 240Vac
0.2 kW	VFS15-2002PM- /W1/Y-A*
0.4 kW	VFS15-2004PM- /W1/Y-A*
0.75 kW	VFS15-2007PM- /W1/Y-A*
1.5 kW	VFS15-2015PM- /W1/Y-A*
2.2 kW	VFS15-2022PM- /W1/Y-A*
3.7 / 4.0 kW	VFS15-2037PM- /W1/Y-A*
5.5 kW	VFS15-2055PM- /W1/Y-A*
7.5 kW	VFS15-2075PM- /W1/Y-A*
11 kW	VFS15-2110PM- /W1/Y-A*
15 kW	VFS15-2150PM- /W1/Y-A*

TOSHIBA

TOSHIBA INDUSTRIAL PRODUCTS SALES CORPORATION

Global Industrial Products Business Unit
9-11, Nihonbashi-Honcho 4-Chome,
Chuo-ku, Tokyo, 103-0023, Japan
TEL : +81-(0)3-3457-8128
FAX : +81-(0)3-5444-9252



HRB19827REV00

TOSHIBA INTERNATIONAL CORPORATION

13131 West Little York RD., Houston,
TX 77041, U.S.A
TEL : +1-713-466-0277
FAX : +1-713-466-8773

TOSHIBA INFRASTRUCTURE SYSTEMS

SOUTH AMERICA LTD
Av. Ibirapuera 2 332, Torre 1, 5th floor
Moema, 04028-003, Sao Paulo-SP, Brazil
TEL : +55-(0)11-4083-7900
FAX : +55-(0)11-4083-7910

TOSHIBA ASIA PACIFIC PTE., LTD

152 Beach Rd., #16-00 Gateway East,
Singapore 189721
TEL : +65-6297-0990
FAX : +65-6297-5510

TOSHIBA CHINA CO., LTD

H-SBC Tower, 1000 Lujiazui Ring Road,
Pudong New Area, Shanghai
200120, The People's Republic of China
TEL : +86-(0)21-6841-5666
FAX : +86-(0)21-6841-1161

TOSHIBA INTERNATIONAL CORPORATION PTY., LTD

2 Morton Street Parramatta, NSW2150, Australia
TEL : +61-(0)2-9768-6800
FAX : +61-(0)2-9890-7542

TOSHIBA CIS LIMITED LIABILITY COMPANY

Kievskaya st., entrance 7, floor 12
Moscow, 121059, Russian Federation
TEL : +7-(0)495-642-8929
FAX : +7-(0)495-642-8908

TOSHIBA INDIA PRIVATE LIMITED

3rd Floor, Building No.10, Tower B,
Phase-II, DLF Cyber City, Gurgaon-122002 India
TEL : +91-(0)124-4996600
FAX : +91-(0)124-4996623

TOSHIBA INFORMATION, INDUSTRIAL AND POWER SYSTEMS TAIWAN CORP.

6F, No66, Sect Shin Sheng N.RD, Taipei, Taiwan
TEL : +886-(0)2-2581-3639
FAX : +886-(0)2-2581-3631

- For further information, please contact your nearest Toshiba Representative or Global Industrial Products Business Unit-Producer Goods.
- The data given in this manual are subject to change without notice.